


LED Sign Installation Instructions

1. Remove “S” hooks and chains from the parts bag located within the packaging.
2. Install the two “S” hooks through the hanger tabs located on the top of the open sign.

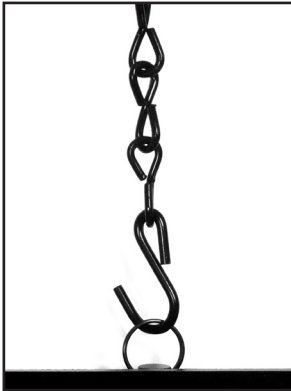

3. Attach the chains to the wall or ceiling using the appropriate hanging hardware.

4. Insert barrel plug into power input and plug adaptor into the electrical outlet.

5. Remove battery tab on remote.



6. Turn sign on/off by the switch on the power cord or with the remote control.

CAUTION

To reduce the risk of fire, electric shock or injury:

- This product is for indoor use only. Do not use in damp or wet locations.
- Not for use with light dimmer circuits.
- To reduce the likelihood of injury or damage, mount only to a mechanically sound surface.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- It is recommended to use a surge protector. Power surges ARE NOT covered under warranty for this product.
- Only use power adaptor supplied with sign.
- Do not handle adapter or sign with wet hands.
- Disconnect power before handling or cleaning.
- Do not use liquid cleaners or aerosol cleaners. Use a dry cloth for cleaning.
- This product is fully assembled and ready to use. Do not attempt to disassemble or service.
- Do not alter the plug or power supply cord in any way.