


BUSINESS HOURS						
MON	TUE	WED	THU	FRI	SAT	SUN
8888	8888	8888	8888	8888	8888	8888
TO	TO	TO	TO	TO	TO	TO
8888	8888	8888	8888	8888	8888	8888



Model #: 425-10-DBH

Digital LED Business Hours Instructions

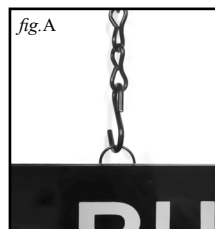

Installation - Hang this sign individually or from a MystiGlo OPEN sign as shown to the right.
*****do not attempt to connect to any other sign*****

1. Locate parts (hang chains & power cord) within the packaging.
2. Hook the chains through the hanger tabs located on the top of the sign. (fig.A)
3. Attach the chains to the ceiling or wall using the appropriate hanging hardware (not included).
4. Insert power cord into [To Wall Outlet] on side of sign (fig.B) and plug adaptor into wall. (Note: top input is for connecting to a MystiGlo OPEN sign only).




Hang with an Open Sign

This sign can connect to and hang from a MystiGlo® Open sign!

Two signs. One power cord.

To order go to:
www.MystiGlo.com - click Replacement Parts

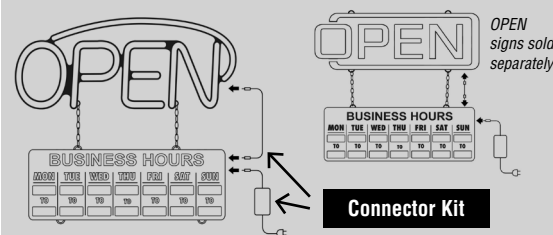

Easy Programming

Programming will stay in memory if unit is turned off.

Setting OPEN Hours

1. Push K1 to scroll to desired DAY, then push K2 to select the digit position you wish to change.
2. Push K3(+) to increase and K4(-) to decrease the time.
3. Once you reach desired time, push K2 to select next digit position or K1 to go to next DAY until all times are set.
4. Hours will automatically save after 5 seconds of inactivity.

Setting CLOSED Days

1. Push K1 to scroll to desired DAY to make Closed.
2. Push K3 and K4 at the **same time** to switch between "CLSD" and numerals.

CAUTION

To reduce the risk of fire, electric shock or injury to persons:

- This product is for indoor use only. Do not use in damp or wet locations.
- Not for use with light dimmer circuits.
- To reduce the likelihood of injury or damage mount only on a surface that is mechanically sound.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- It is recommended to use a surge protector. Power surges ARE NOT covered under warranty for this product.
- Only use 120VAC input, 60Hz, 18VDC, 2000mA output adaptor.
- Do not handle adapter or sign with wet hands.
- Disconnect power before handling or cleaning.
- Do not spray liquid or aerosol cleaners directly onto sign. Use a dry or damp cloth for cleaning.
- This product is fully assembled and ready to use. Do not attempt to disassemble or service.
- Do not alter the plug or power supply cord in any way.

LIMITED 1 YEAR WARRANTY Model #: 425-10-DBH

C-M Glo, LLC warrants that this product will be free from defect due to material and workmanship under normal use for a period of one (1) year from the date of purchase. Warranty is void if product is abused, disassembled, or exposed to atmosphere or conditions other than stated within instructions. If product fails within the specified time, return the product to the store where it was purchased or return sign with all accessories, original packing material to C-M Glo, LLC. Your sign will be repaired or replaced within six weeks of receipt of your unit. Please ship your sign to:

C-M Glo, LLC • 1201 N. 4th Street, Watertown, WI 53098 • (920) 261-1000

DISCLAIMER OF WARRANTY

Warranty is invalid if purchaser fails to properly operate and/or maintain the product. This Warranty is not transferable to third parties. There is no warranty for fitness for a particular purpose. This Warranty is in lieu of all other warranties expressed or implied. No representative or any other person is authorized or permitted to make any Warranty changes or assume on behalf of C-M Glo, LLC any liability not strictly in accordance with this Warranty.

C-M Glo, LLC shall not be liable for special or consequential loss or damages, direct or indirect, such as, but not limited to, damage or loss of property or equipment, loss of profit or revenue, loss of use of the product, cost or replacement of the product, or claims for service interruptions.

Tampering, accident, abuse, negligence, unauthorized repairs, or other causes unrelated to defective materials or workmanship will void this Warranty. This warranty does not cover costs associated with shipping the product to the manufacturer. This warranty does not cover replacement of remote battery.